

**I** ISTRUZIONI DI MONTAGGIO  
DEL BOX RIDUCIBILE


































**GB** REDUCIBLE BOX ASSEMBLING  
INSTRUCTIONS

**F** ISTRUCTIONS POUR LE MONTAGE  
DES CABINES REDUCIBLES



**E** ISTRUCCIONES PARA EL MONTAJE  
DE LOS BOXES REDUCIBLES

**P** ISTRUÇÕES PARA A MONTAGEM  
DOS BOXES REDUZÍVEIS

**D** MONTAGEANLEITUNG DER  
KABINEN VERSTELLBARE

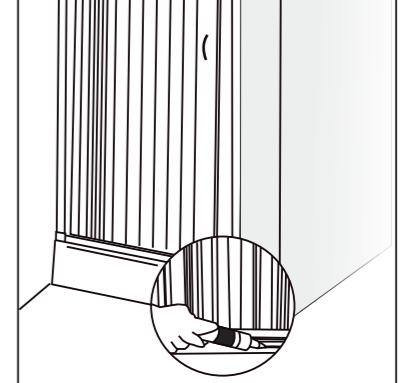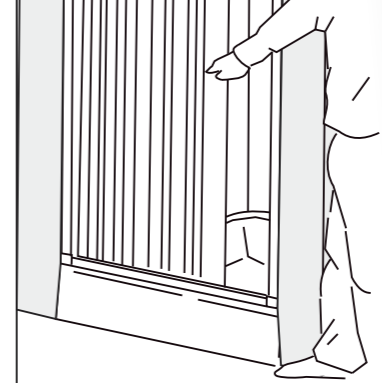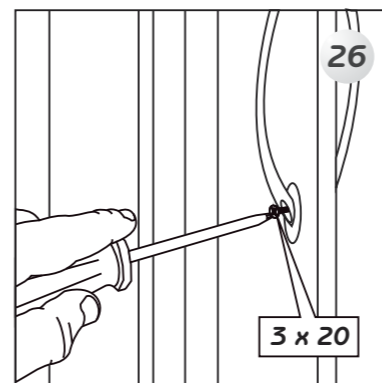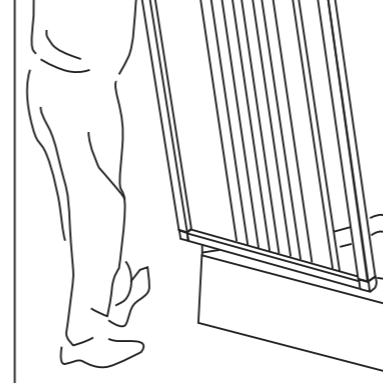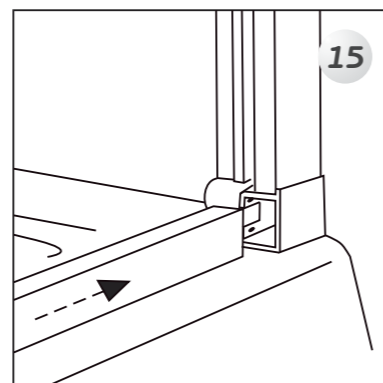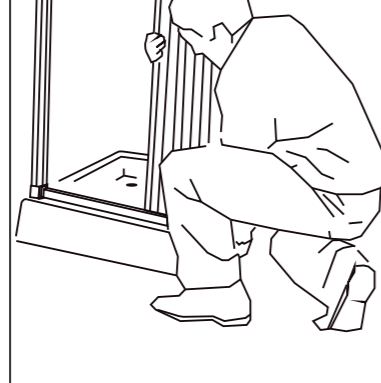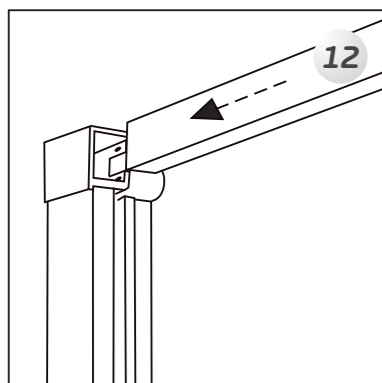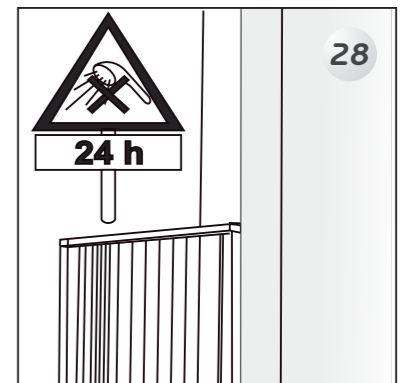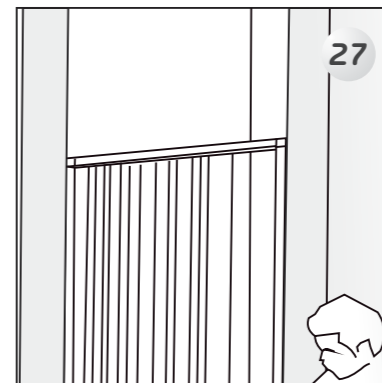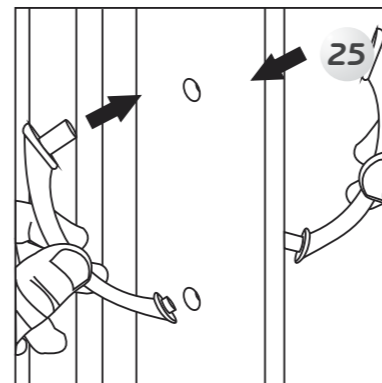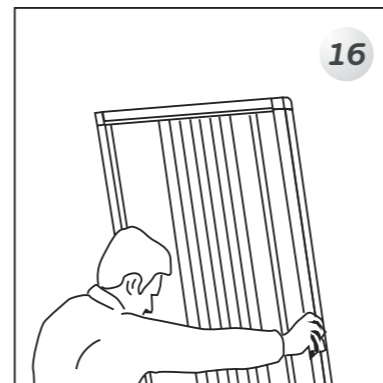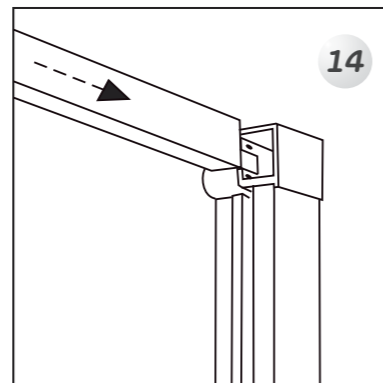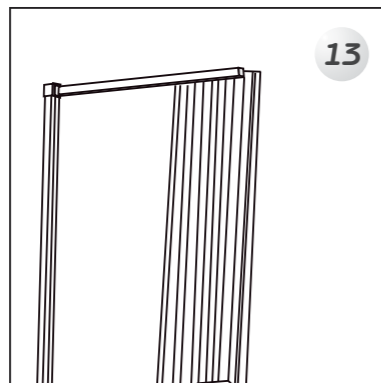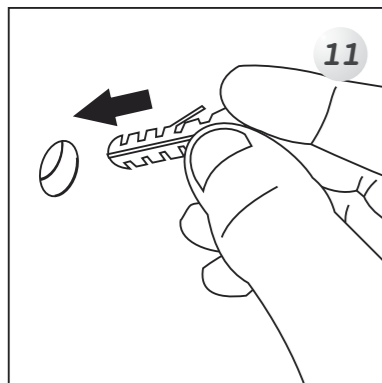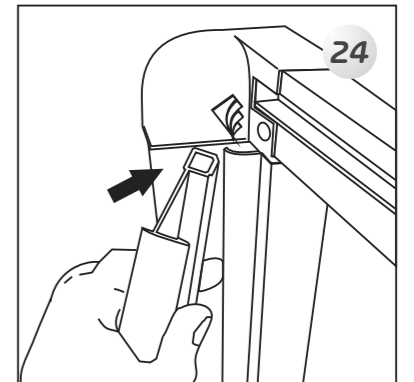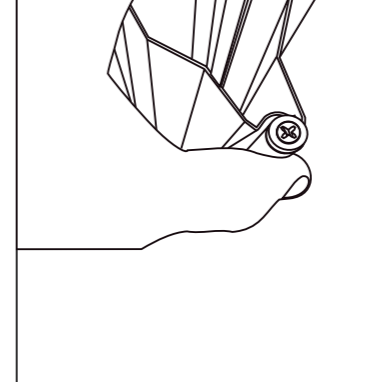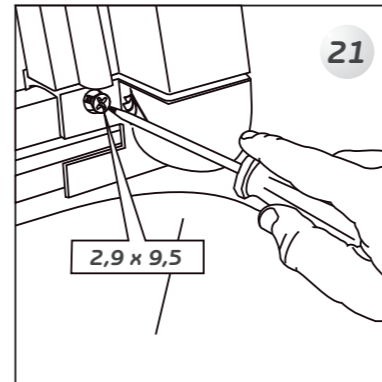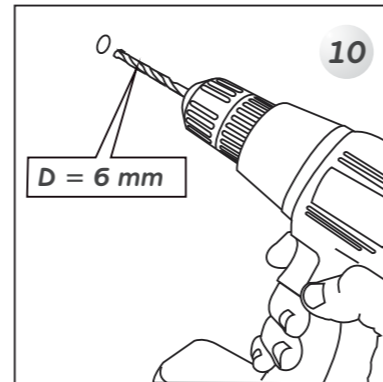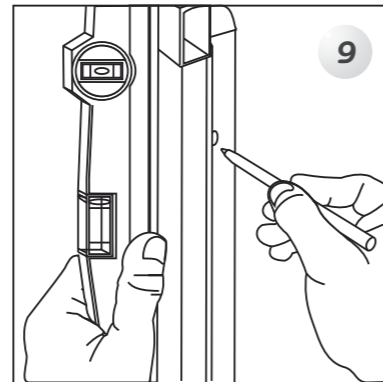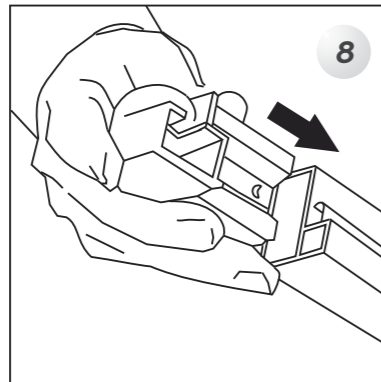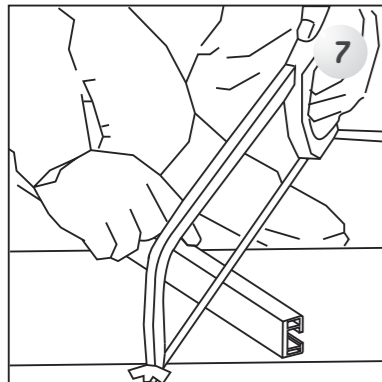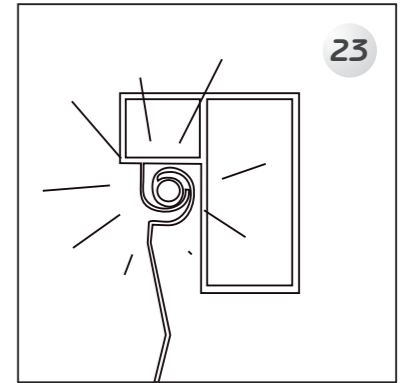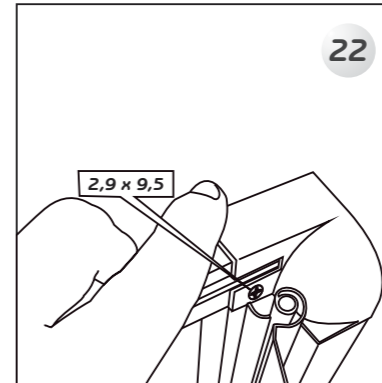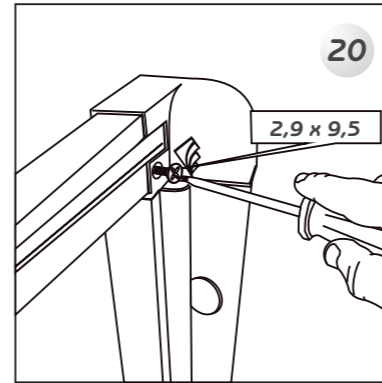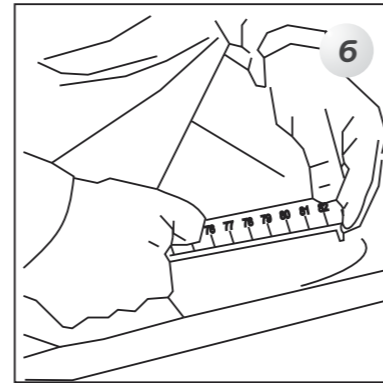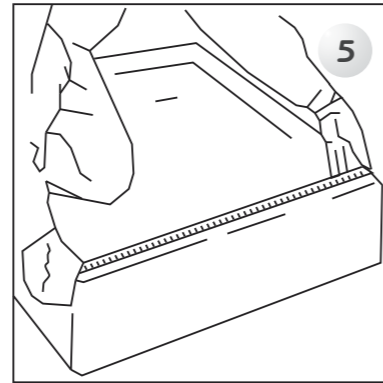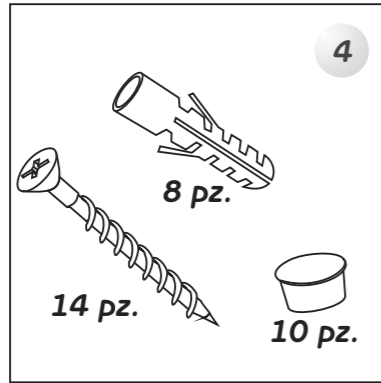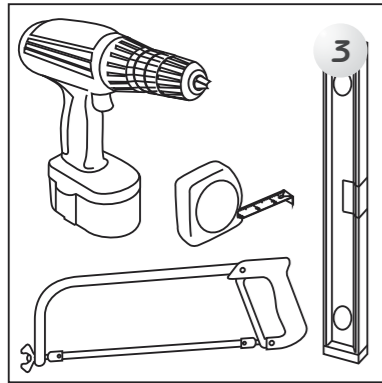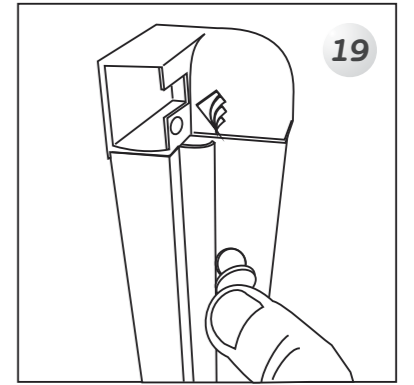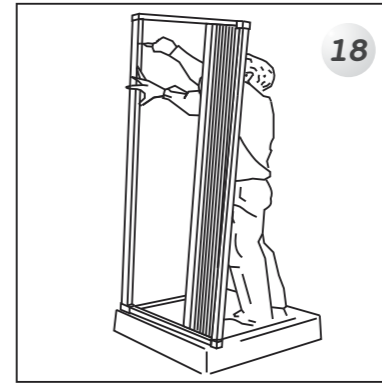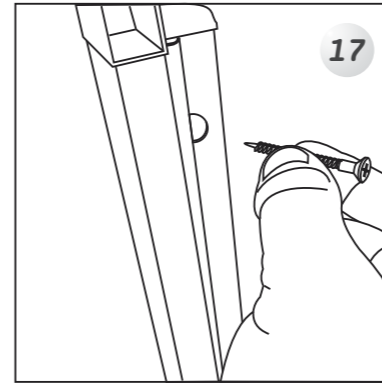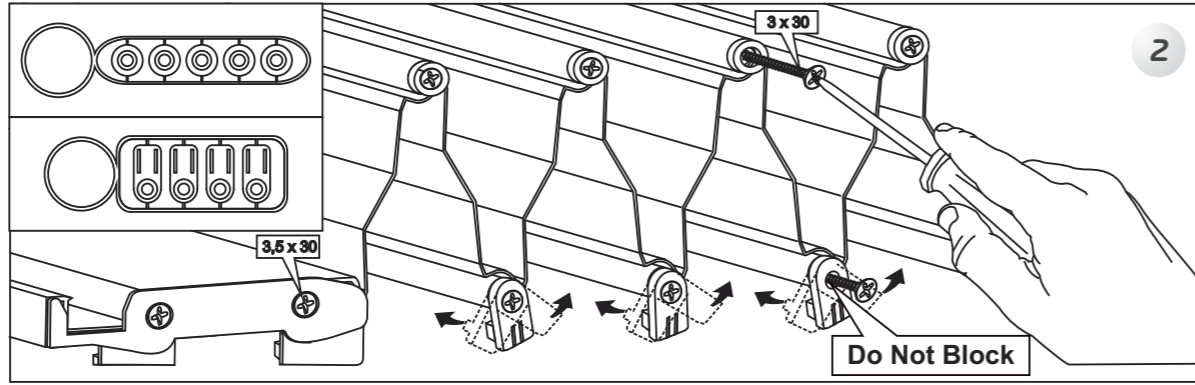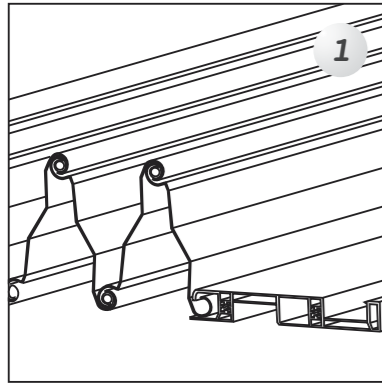

**FORTE**

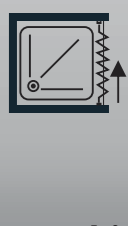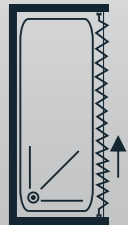

**Point Vasca Point**

**NOVA**



**I** ISTRUZIONI DI MONTAGGIO DEL BOX RIDUCIBILE






























**GB** REDUCIBLE BOX ASSEMBLING INSTRUCTIONS

**F** ISTRUCTIONS POUR LE MONTAGE DES CABINES REDUCIBLES



**E** ISTRUCCIONES PARA EL MONTAJE DE LOS BOXES REDUCIBLES

**P** ISTRUÇÕES PARA A MONTAGEM DOS BOXES REDUZÍVEIS

**D** MONTAGEANLEITUNG DER KABINEN VERSTELLBARE

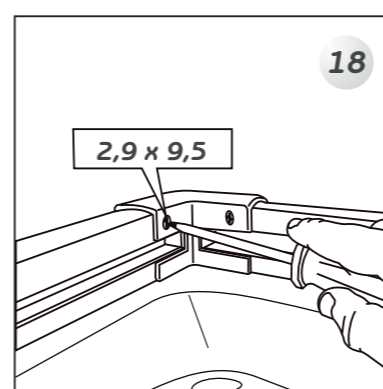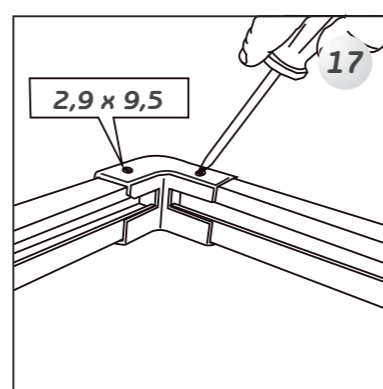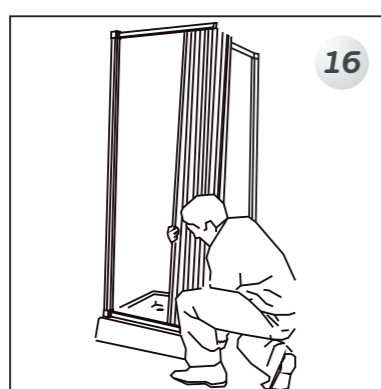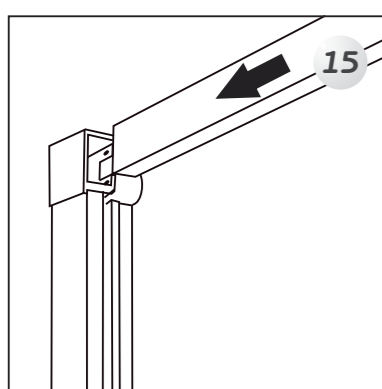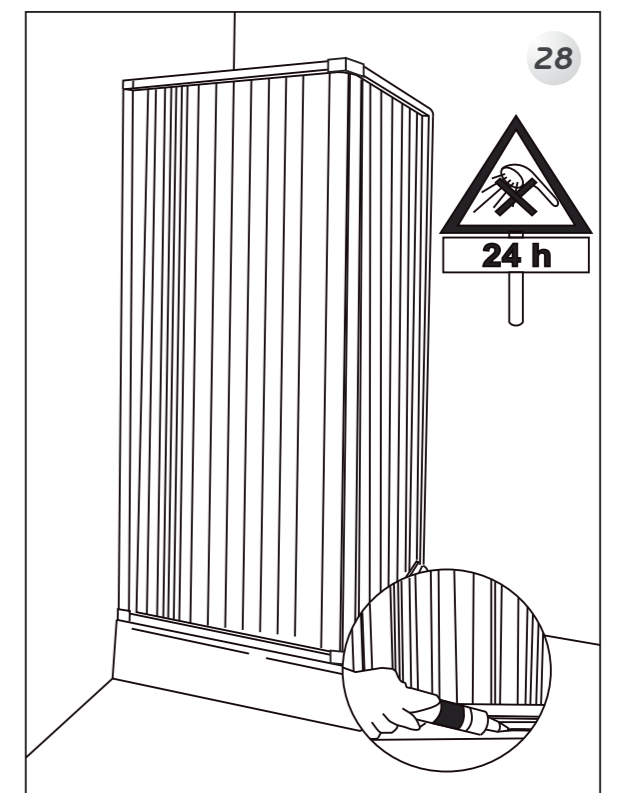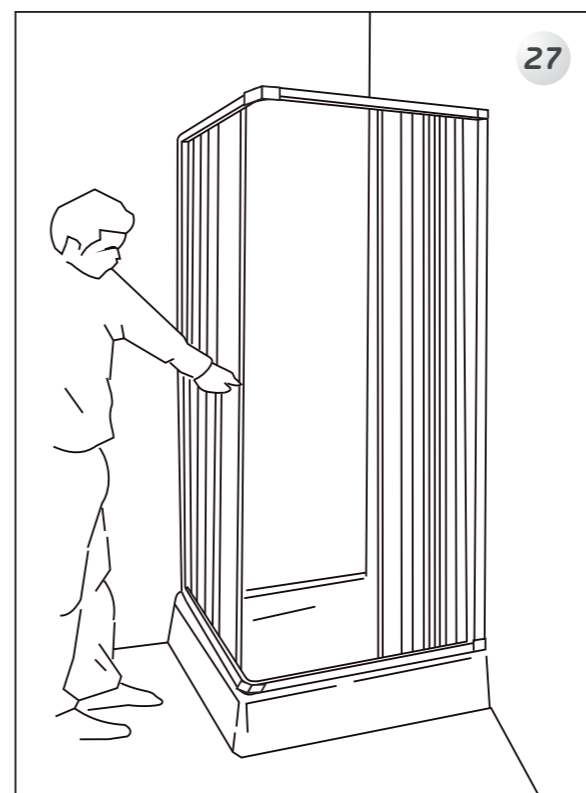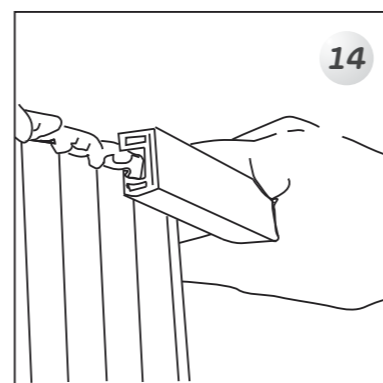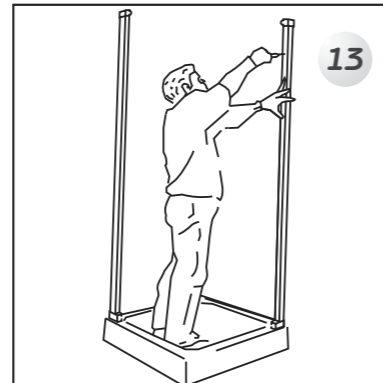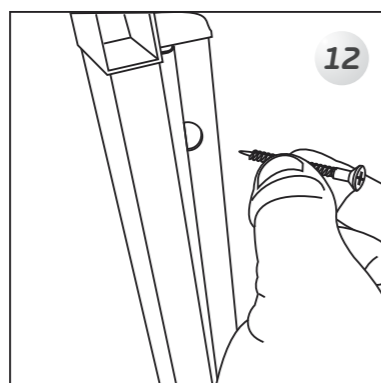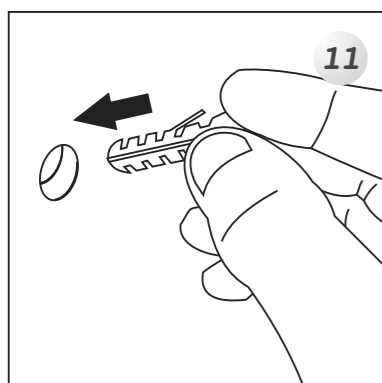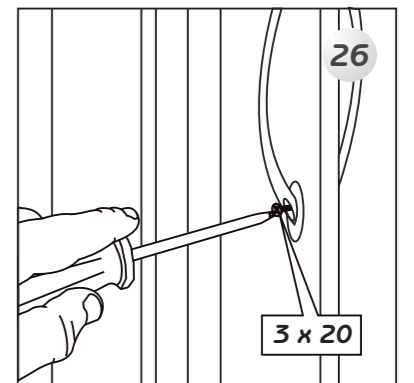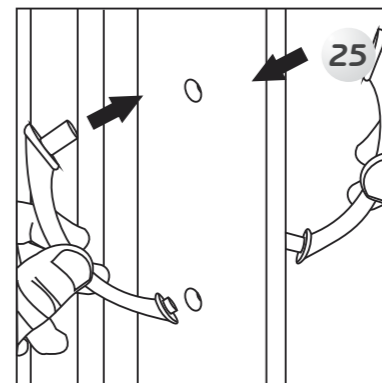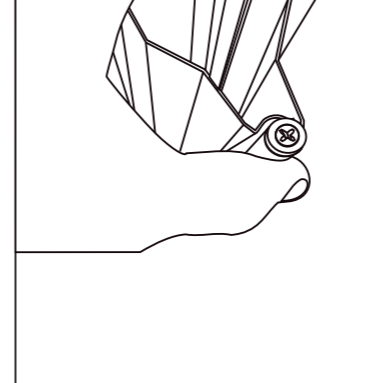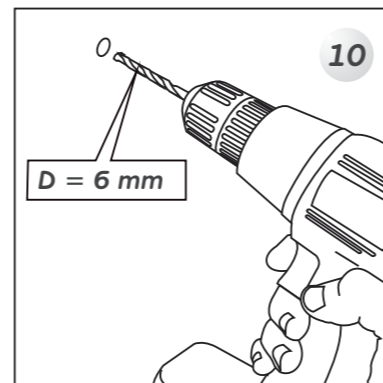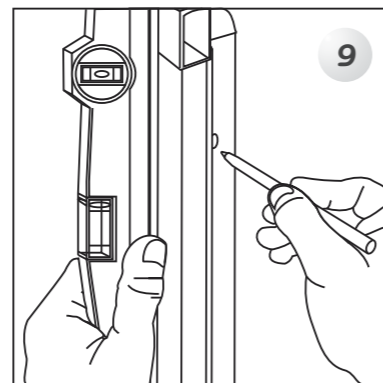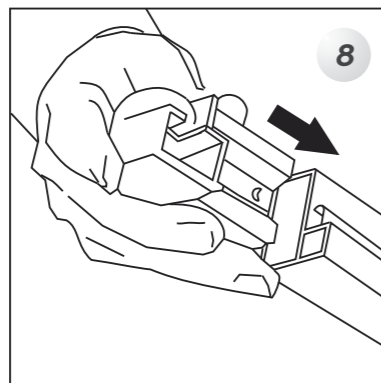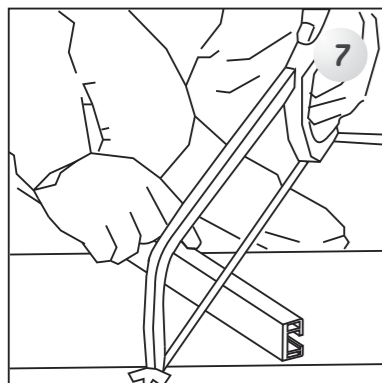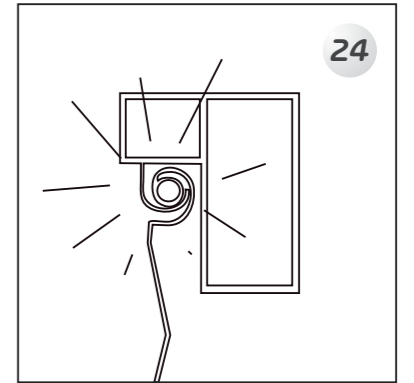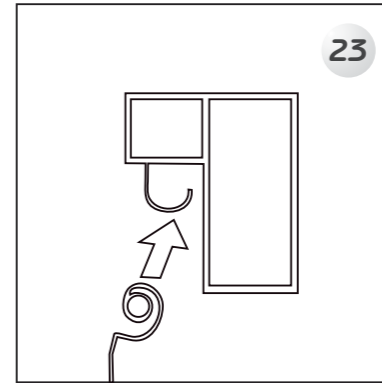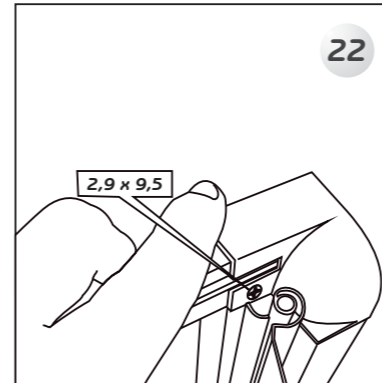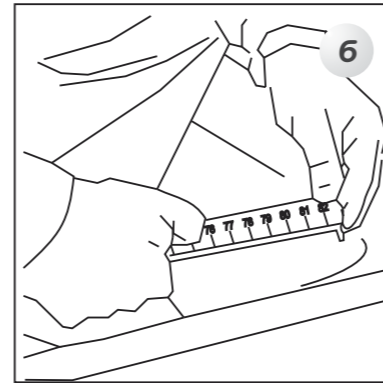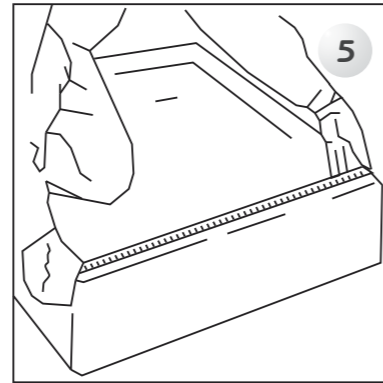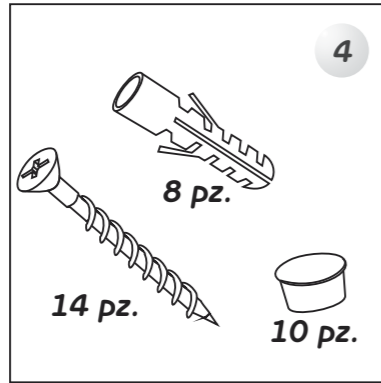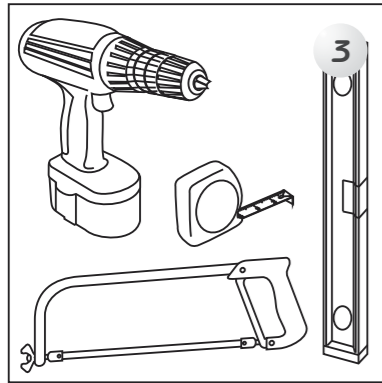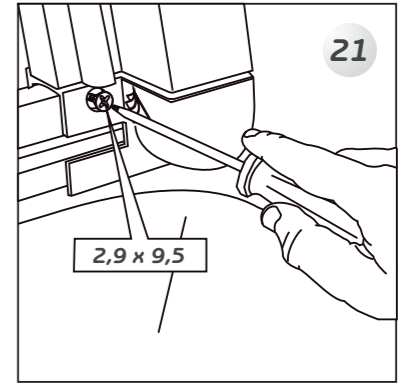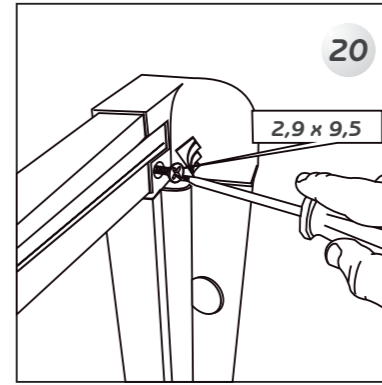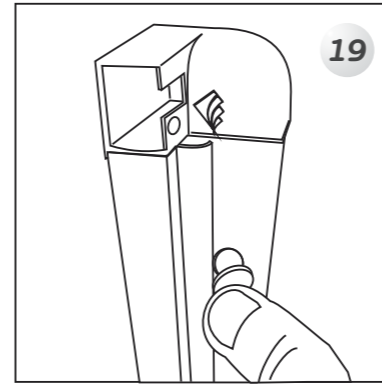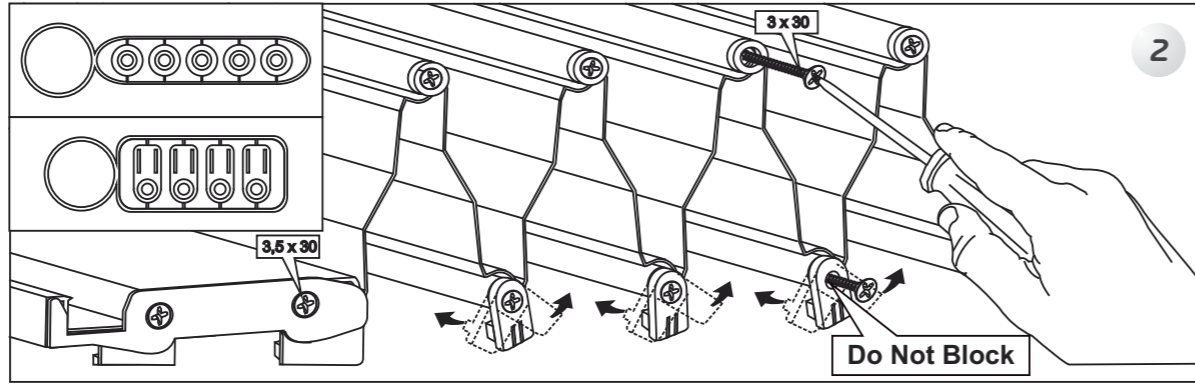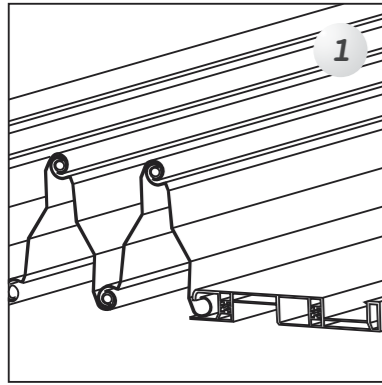

**FORTE**

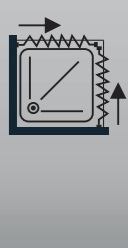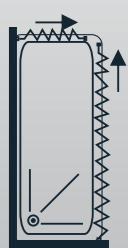

**Sky Vasca Sky**

**NOVA**

